


DSC

From Tyco Security Products

PowerSeries
neo

3G8080(I)/CD8080(I) HSPA/CDMA Controller

V1.1 Installation Manual

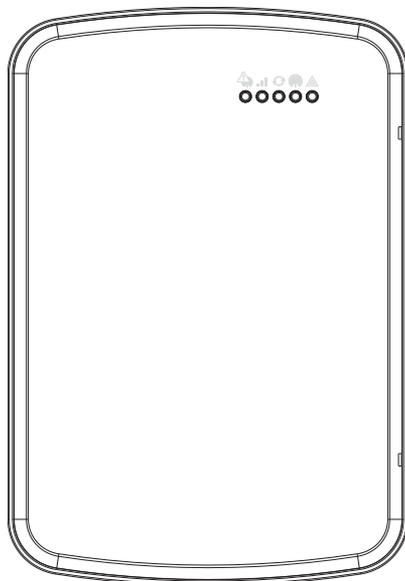

WARNING: This manual contains information on limitations regarding product use and function and information on the limitations as to liability of the manufacturer. The entire manual should be carefully read.

Warning: Installer Please Read Carefully	4
Note to Installers	4
System Failures	4
Access by Intruders	4
Component Failure	4
Compromise of Radio Frequency (Wireless)	4
Criminal Knowledge	4
Failure of Replaceable Batteries	4
Inadequate Installation	4
Inadequate Testing	4
Insufficient Time	4
Motion Detectors	4
Power Failure	4
Security and Insurance	5
Smoke Detectors	5
Telephone Lines	5
Warning Devices	5
General	6
IMPORTANT	6
Safety Information	6
Alarm.com Introduction	6
HSPA 3G Module (3G8080)/(I)	6
CDMA Module (CD8080)/(I)	7
Contact Information	7
Features	7
Installation	9
Tools and Supplies Required	9
UL/ULC Installation Requirements	9
Power Up	10
Enroll Alarm.com Image Sensor	10
HSPA CDMA Phone Test (Module Registration)	10
Panel Settings	10
Night Arming	10
Central Station and Telephone Line Settings	10
Two-Way Voice	11
Notifications	11
Panel Settings Automatically Change	11
Clock	12
Troubleshooting (Module Status Information)	12
Improving Wireless Signal Strength	13
Troubleshooting LEDs	13
LED Functions	14

LED Details	14
LED L1 (red)	14
LED L2 (yellow)	14
LED L3 (yellow)	15
LED L4 (green)	15
LED L5 (yellow)	15
Various Module States (Modes)	15
Improving Wireless Signal Strength	16
Walking the Customer through New User Setup on the Web	16
Installer Programming	17
Interactive Menus	17
Limited Warranty	20
International Warranty	20
Warranty Procedure	20
Conditions to Void Warranty	20
Items Not Covered by Warranty	20
Disclaimer of Warranties	20
Installer's Lockout	20
Out of Warranty Repairs	20
End User License Agreement	21
SOFTWARE PRODUCT LICENSE	21
DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS	21
LIMITED WARRANTY	22
Regulatory Information	22
FCC Statement	22
Industry Canada Statement	22
FCC/IC Label	23
EN50131 Compliant Installations	23

Warning: Installer Please Read Carefully

Note to Installers

The warnings on this page contain vital information. As the only individual in contact with system users, it is the installer's responsibility to bring each item in this warning to the attention of all users of this system.

System Failures

This system has been carefully designed to be as effective as possible. There are circumstances, however, involving fire, burglary, or other types of emergencies where it may not provide protection. Any alarm system of any type may be compromised deliberately or may fail to operate as expected for a variety of reasons. Some, but not all, of the reasons may be:

Access by Intruders

Intruders may enter through an unprotected access point, circumvent a sensing device, evade detection by moving through an area of insufficient coverage, disconnect a warning device, or interfere with or prevent the proper operation of the system.

Component Failure

Although every effort has been made to make this system as reliable as possible, the system may fail to function as intended due to the failure of a component.

Compromise of Radio Frequency (Wireless)

Devices Signals may not reach the receiver under all circumstances which could include metal objects placed on or near the radio path or deliberate jamming or other inadvertent radio signal interference.

Criminal Knowledge

This system contains security features which were known to be effective at the time of manufacture. It is possible for persons with criminal intent to develop techniques which reduce the effectiveness of these features. It is important that your security system be reviewed periodically to ensure that its features remain effective and that it is updated or replaced if it is found that it does not provide the protection expected.

Failure of Replaceable Batteries

This system's wireless transmitters have been designed to provide several years of battery life under normal conditions. The expected battery life is a function of the device environment, usage, and type. Ambient conditions such as high humidity, high or low temperatures, or large temperature fluctuations may reduce the expected battery life. While each transmitting device has a low battery monitor which identifies when the batteries need to be replaced, this monitor may fail to operate as expected. Regular testing and maintenance will keep the system in good operating condition.

Inadequate Installation

A security system must be installed properly in order to provide adequate protection. Every installation should be evaluated by a security professional to ensure that all access points and areas are covered. Locks and latches on windows and doors must be secure and operate as intended. Windows, doors, walls, ceilings and other building materials must be of sufficient strength and construction to provide the level of protection expected. A reevaluation must be done during and after any construction activity. An evaluation by the fire and/or police department is highly recommended if this service is available.

Inadequate Testing

Most problems that would prevent an alarm system from operating as intended can be found by regular testing and maintenance. The complete system should be tested weekly and immediately after a break-in, an attempted break-in, a fire, a storm, an earthquake, an accident, or any kind of construction activity inside or outside the premises. The testing should include all sensing devices, keypads, consoles, alarm indicating devices, and any other operational devices that are part of the system.

Insufficient Time

There may be circumstances when the system will operate as intended, yet the occupants will not be protected from an emergency due to their inability to respond to the warnings in a timely manner. If the system is remotely monitored, the response may not occur in time to protect the occupants or their belongings.

Motion Detectors

Motion detectors can only detect motion within the designated areas as shown in their respective installation instructions. They cannot discriminate between intruders and intended occupants. Motion detectors do not provide volumetric area protection. They have multiple beams of detection and motion can only be detected in unobstructed areas covered by these beams. They cannot detect motion which occurs behind walls, ceilings, floor, closed doors, glass partitions, glass doors or windows. Any type of tampering whether intentional or unintentional such as masking, painting, or spraying of any material on the lenses, mirrors, windows or any other part of the detection system will impair its proper operation. Passive infrared motion detectors operate by sensing changes in temperature. However their effectiveness can be reduced when the ambient temperature rises near or above body temperature or if there are intentional or unintentional sources of heat in or near the detection area. Some of these heat sources could be heaters, radiators, stoves, barbecues, fireplaces, sunlight, steam vents, lighting and so on.

Power Failure

Control units, intrusion detectors, smoke detectors and many other security devices require an adequate power supply for proper operation. If a device operates from batteries, it is possible for the batteries to fail. Even if the batteries have not failed, they must be charged, in good condition and installed correctly. If a device operates only by AC power, any interruption, however brief, will render that device inoperative while it does not have power. Power interruptions of any length are often accompanied by voltage fluctuations which may damage electronic equipment such as a security system. After a power interruption has occurred, immediately conduct a complete system test to ensure that the system operates as intended.

Security and Insurance

Regardless of its capabilities, an alarm system is not a substitute for property or life insurance. An alarm system also is not a substitute for property owners, renters, or other occupants to act prudently to prevent or minimize the harmful effects of an emergency situation.

Smoke Detectors

Smoke detectors that are a part of this system may not properly alert occupants of a fire for a number of reasons, some of which follow. The smoke detectors may have been improperly installed or positioned. Smoke may not be able to reach the smoke detectors, such as when the fire is in a chimney, walls or roofs, or on the other side of closed doors. Smoke detectors may not detect smoke from fires on another level of the residence or building. Every fire is different in the amount of smoke produced and the rate of burning. Smoke detectors cannot sense all types of fires equally well. Smoke detectors may not provide timely warning of fires caused by carelessness or safety hazards such as smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson. Even if the smoke detector operates as intended, there may be circumstances when there is insufficient warning to allow all occupants to escape in time to avoid injury or death.

Telephone Lines

If telephone lines are used to transmit alarms, they may be out of service or busy for certain periods of time. Also an intruder may cut the telephone line or defeat its operation by more sophisticated means which may be difficult to detect.

Warning Devices

Warning devices such as sirens, bells, horns, or strobes may not warn people or waken someone sleeping if there is an intervening wall or door. If warning devices are located on a different level of the residence or premise, then it is less likely that the occupants will be alerted or awakened. Audible warning devices may be interfered with by other noise sources such as stereos, radios, televisions, air conditioners, other appliances, or passing traffic. Audible warning devices, however loud, may not be heard by a hearing-impaired person.

General

IMPORTANT

This installation manual shall be used in conjunction with the control panel. All the safety instructions specified within that manual shall be observed. The control panel is referenced as the “panel” throughout this document. This installation guide provides the basic wiring, programming and troubleshooting information. Use this guide in conjunction with the installation manual available online from the DSC website at www.dsc.com.

The HSPA/CDMA alarm communicator is a fixed, wall-mounted unit, and shall be installed in the location specified in these instructions. The equipment enclosure must be fully assembled and closed, with all the necessary screws/tabs, and secured to a wall before operation. Internal wiring must be routed in a manner that prevents:

- Excessive strain on wire and on terminal connections,
- Interference between power limited and non power limited wiring,
- Loosening of terminal connections, or
- Damage of conductor insulation.

WARNING: Never install this equipment during a lightning storm.

Safety Information

The installer must instruct the system user on each of the following:

- Do not attempt to service this product. Opening or removing covers may expose the user to dangerous voltages or other risks.
- Any servicing shall be referred to service persons only.
- Use authorized accessories only with this equipment.
- Do not stay close to the equipment during device operation.
- Do not touch the external antenna.

Alarm.com Introduction

The purpose of this guide is to introduce you to the Alarm.com communicator modules. The following sections identify these modules and offer you a brief overview as their capabilities.

Note: Both the HSPA3G module and the CDMA module are available in the following models:

Module	Model
HSPA3G	3G8080
	3G8080(I)*
CDMA	CD8080
	CD8080(I)*
* Image Sensor Compatible	

HSPA 3G Module (3G8080)/(I)

The HSPA module enables wireless reporting of all alarms and other system events from the DSC Neo control panel using an all-digital, HSPA wireless (cellular) network. The module can be used as the primary communication path for all alarm signaling, or as a backup to a telephone connection to the central monitoring station. The wireless alarm signaling and routing service is operated by Alarm.com. The HSPA module also features integrated support for Alarm.com’s home automation solution with built-in Z-Wave capabilities.

CDMA Module (CD8080)/(I)

The CDMA module for Neo enables wireless reporting of all alarms and other system events from the DSC Neo control panel using an all-digital, CDMA wireless (cellular) network. The module can be used as the primary communication path for all alarm signaling, or as a backup to a telephone connection to the central monitoring station. The wireless alarm signaling and routing service is operated by Alarm.com. The CDMA module also features integrated support for Alarm.com's home automation solution with built-in Z-Wave capabilities.

Note: Alarm.com's home automation solution with built-in Z-Wave capabilities is not UL/ULC evaluated.

Contact Information

For additional information and support on Alarm.com modules, initial account setup, home automation, and all other Alarm.com products and services, please visit: www.Alarm.com/dealer or contact Alarm.com technical support at: 1-866-834-0470.

Features

- 128-bit AES encryption via cellular and Internet (NIST validation certificate number: 3162).
- Back up or primary cellular alarm communication.
- Automatically switches to 2G (EDGE/GPRS) if HSPA(3G) service is not available.
- Full event reporting to central station (UL/ULC listed).
- Cellular periodic test transmission.
- Integrated call routing.
- Remote firmware upgrade capability of the communicator and panel firmware via Internet and/or cellular.
- Panel remote uploading/downloading support via cellular.
- PC-LINK connection.
- Programmable labels.
- SIA and Contact ID (CID) formats supported.
- Signal strength and trouble display LEDs.
- Subscriber Identity Module (SIM) card included with communicator.
- Supervision heartbeats sent via cellular and Internet.

Communicator Ratings

Model	3G8080(I)	CD8080(I)
Power Supply Ratings		
Input Voltage	9V - 14V DC	
Current Consumption		
Standby Current	70mA@12V (I)	70mA@12V (I)
Alarm (Transmitting) Current	180mA@12V (I)	180mA@12V (I)
Cellular Network	HSPA 3G	CDMA
Operating Frequency	850, 1900, 2100MHz	850, 1900, 2100MHz
Environmental Specifications		
Operating Temperature	14°F to 131°F (-10°C to 55°C)	
Storage Temperature	-30°F to 140°F (-34°C to 60°C)	
Humidity	90% non-condensing	
Mechanical Specifications		
Dimensions	6" x 8.9" x 1.3"	
Weight (grams)	365g (I)	360g (I)

Communicator Compatibility

Communicator	Receiver/ Panel	Description
3G8080(I) CD8080(I)	Receiver	<ul style="list-style-type: none"> • Sur-Gard System I-IP Receiver, version 1.13+ • Sur-Gard System II Receiver, version 2.10+ • Sur-Gard SG-DRL3-IP, version 2.30+ (for Sur-Gard System III Receiver) • Sur-Gard SG-DRL4-IP version 1.20+ (for Sur-Gard System IV Receiver) • Sur-Gard SG-DRL5-IP version 1.00+ (for Sur-Gard System 5 Receiver)
	Panel	<ul style="list-style-type: none"> • HS2016, version 1.1+ • HS2032, version 1.1+ • HS2064, version 1.1+ • HS2128, version 1.1+

Note: Enter [*][8][Installer Code][900] at keypad to view the panel version number.

Products or components of products, which perform communications functions only shall comply with the requirements applicable to communications equipment as specified in UL60950 or CAN CSA C22.2. No. 60950-1, Information Technology Equipment - Safety - Part 1: General Requirements. Where network interfaces are external to the control unit or receiver, compliance to CAN CSA C22.2. No. 60950-1 is adequate. Such components include, but are not limited to: hubs; routers; NIDs; third-party communications service providers; DSL modems; and cable modems.

INSTALLATION

Follow these guidelines during installation.

- Before affixing the communicator to a wall, verify the HSPA/CDMA signal level at the installation location. On a keypad, press and hold the 5 key for 2 seconds to view the HSPA/CDMA signal level. An installation location with a sustained signal level of two or more bars is recommended.
- Do not exceed the panel total output power when using panel power for the HSPA/CDMA module, hard-wired sensors, and /or sirens. Refer to the specific panel installation instructions for details. Only one Alarm.com HSPA/CDMA module can be used per panel.
- The HSPA/CDMA module draws on average 100 mA during normal operation. In PowerSave mode, during or immediately following an AC power failure, the module will draw only 5mA on average (10mA with an image sensor daughterboard).
- To minimize potential interference with cellular signaling, avoid mounting the communicator in areas with excessive metal or electrical wiring, such as furnaces or utility rooms.


Tools and Supplies Required

You will need the following tools and supplies:

- Small flat-head and Phillips screwdrivers
- Screws (included)
- Antenna (included)
- 16 pin ribbon cable (included)

UL/ULC Installation Requirements

- For ULC Residential fire and burglary applications, the 3G8080(I)/CD8080(I) can be used as a primary communication channel via Cellular, or as a back-up in conjunction with the Digital Alarm Communicator Transmitter (DACT). Test transmission every 24 hours is enabled on each channel.
- For UL Residential fire and burglary applications, the 3G8080(I)/CD8080(I) can be used as primary communication channel via Cellular, or as a back-up in conjunction with the DACT. (30 day test transmission is required on each channel).

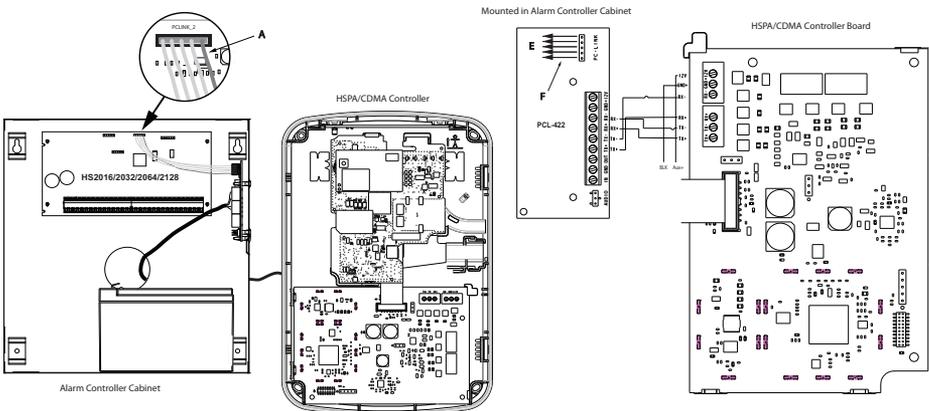

Power Up

Connect panel battery and AC power. Once an HSPA/CDMA module is connected to a powered control panel, view key items on the LCD. Ensure that the module has been fully connected to the panel via the 4-pin cable.

Enroll Alarm.com Image Sensor

1. Ensure batteries are removed from the sensor.
2. On the panel, enter the Interactive Services menu. Interactive Services can be accessed, via section [851] of Installer Programming.
3. Press [*][8] [**Installer Code**] [851].
4. Scroll to Image Sensor Setup and press [*].
5. Scroll to Learn Image Sensor and press [*]. The will display “Power up or reset I.S. now.”
6. Insert the batteries into the sensor. Wait approximately 20 seconds for the control panel screen to display: “I.S. [x] Added as Sensor [y].” The LED on the sensor will turn solid for 5 seconds, once the sensor has enrolled.
7. Perform another panel comm-test to ensure that Alarm.com receives the updated device equipment list. This will speed up the sensor initialization process.
 - The zone will be programmed automatically into the next available slot in section [560][001]-[032].
 - Zone type and attribute can be assigned in the installer menu, in a similar way as other regular zones. For more information, refer to the "Zone Setup" section of the PowerSeries Neo Alarm Controller Reference Manual.

HSPA CDMA Phone Test (Module Registration)

To initiate module communication with Alarm.com and the HSPA/CDMA network for the first time, perform an “HSPA/CDMA phone test”. Note that the phone test can also be used at any time by the installer to force communication with Alarm.com. A phone test can also be completed through the Interactive Services menu. Perform a phone test by pressing and holding [3] for two seconds. To perform the phone test on, [*][6] followed by the **master code** and [04].

The panel indicates when the HSPA/CDMA phone test has completed by activating the siren output on medium volume for 2 seconds followed by full volume for 2 seconds. However, if the phone test was initiated via the [3] key, or through the Interactive Services menu, the siren will not sound. All display lights and LCD pixels turn on. This indicates that Alarm.com has received and acknowledged the signal. This does not guarantee that the signal went through to a central station; it confirms that Alarm.com’s Network Operations Center received the signal. The central station should be contacted directly to verify that the signal was received on the correct account and that the central station routing settings have been set up correctly. If the signal does not go through to the Central Station, the panel will display a “Failure to Communicate” message. Double check the account’s Central Station Forwarding Settings on Alarm.com and contact technical support if the trouble persists.

Panel Settings

Night Arming

The panel has the ability to night arm, which arms the perimeter and restricts movement to designated interior areas. Night arming via the panel should be restricted to one of the five function keys. For more information on Night Arming and how to program the function keys, see the installation guide provided with the panel.

Central Station and Telephone Line Settings

Central Station and telephone line settings will be automatically configured through the CS Forwarding Settings page of the Dealer Site. The following are the panel settings that will be configured via the Dealer Site

page and should not be configured in the panel:

Section	Option	Description
015	7	Telephone line monitoring
301-001	--	Communication telephone number 1
301-002	--	Communication telephone number 2
301-003	--	Communication telephone number 3
301-004	--	Communication telephone number 4
310-000	--	System account number
310-001	--	Partition 1 account number
310-002	--	Partition 2 account number
310-003	--	Partition 3 account number
310-004	--	Partition 4 account number
310-005	--	Partition 5 account number
310-006	--	Partition 6 account number
310-007	--	Partition 7 account number
310-008	--	Partition 8 account number
350-001	--	Receiver 1 communicator format
350-002	--	Receiver 2 communicator format
350-003	--	Receiver 3 communicator format
350-004	--	Receiver 4 communicator format
384	2	Communicator backup options

Two-Way Voice

Section [600] option [8] controls how the CS operator initiates the 2-way audio session. Set to ON for the session to be initiated by the operator. Set to OFF for the session to begin immediately after the siren turns off

Notifications

The following panel settings may alter the behavior of customer notifications:

Section	Option	Description
015	4	If this option is ON, keyfob arming notifications will not be associated with a specific user

Panel Settings Automatically Change

Some panel settings are changed automatically when the HSPA/CDMA module is connected to the control panel. These settings should not be altered. They are:

Section	Option	Value	Description
015	6	OFF	Master code is not changeable and must be OFF to ensure the module communicates the correct master code
017	6	OFF	Daylights saving time must be disabled to ensure panel time is accurate
024	5	OFF	Realtime clock must be disabled to ensure

Section	Option	Value	Description
			panel time is accurate
377-002	AC Failure Communication Delay	Random value between 001 and 030	AC Failure Communication Delay should be set between 001 and 030 to ensure notifications for power failures are received
377-002	Wireless Device Low Battery Transmission Delay	001	Wireless Device Low Battery Transmission Delay should be set to 001 to ensure notifications for low batteries are received
380	1	ON	Communications must be enabled so the module can communicate with the panel
380	2	OFF	System should transmit alarm restores immediately when the zone is restored
382	5	ON	Communications must be enabled so the module can communicate with the panel
382	6	OFF	AC Failure Transmission Delay should be in minutes
041	-	00	User Access Codes must be 4-digits

Clock

The HSPA/CDMA module sets the panel clock when it connects to Alarm.com and then updates it every 18 hours. It is important to select the correct panel time zone on the Alarm.com website, or the panel time will not be accurate. If a system is powered up before the customer account has been created, the time zone will default to Eastern Standard Time.

Troubleshooting (Module Status Information)

Module status information for verifying and troubleshooting the module connection status or errors can be found through the Interactive Services menus. To access these, press [*][8][Installer Code][851]. See the following table for potential module states.

Status	Description
Idle	Most common state. Module is not actively sending data and no errors are present
Roaming	Roaming on partner network
SIM Missing	The SIM card is missing. Not applicable to CDMA
PowerSave Mode	AC power is down
Registering...	The module is trying to register on the HSPA/CDMA network
Connection Error	The module is registered on the HSPA/CDMA network but cannot connect with Alarm.com. Contact Alarm.com technical support for more information
Radio Error	Radio portion of the module is not operating correctly. Power cycle the panel and call Alarm.com technical support if the trouble persists
Server Error	Identifies a server error. If it persists, the account may have been set up incorrectly
Connected	Currently connected and transmitting information to the Alarm.com servers
Connecting...	In the process of connecting to Alarm.com
Updating...	Updating signal level

Installation

In addition, some of the information can be retrieved via long key presses from the keypad. Press and hold the following panel keys for 2 seconds to display the given information on the panel display. Most messages are displayed for less than 30 seconds but can be cut short by pressing the 0 Key for 2 seconds.

Status Keys	Description
1 key	10-digit module serial number. This number is needed to create the Alarm.com customer account
2 key	Module firmware version. (e.g., 181a)
3 key	Initiate communication test. Important: This is a required test to correctly complete the installation
5 key	Wireless signal strength level and module status or error, if any. The panel will display the signal level in bars (0 to 5) and as a numerical value (0 to 31) followed by the connection mode (HSPA/CDMA).
6 key	Battery voltage as read by the module, to two decimal places, and the AC power status. (e.g., Battery: 6.79v, AC Power OK)
8 key	HSPA/CDMA frequency used by the module: "High" = 1900MHz, 2100MHz; "Low" = 850 MHz. The panel will specify either "3G" or "2G" depending on your coverage, but will always attempt to go to 3G coverage.

Improving Wireless Signal Strength

As you make changes to the module location to improve signal strength, request updated signal readings to verify changes. To request an updated reading, press and hold the "5" key for 2 seconds.


Guidelines for optimal wireless signal strength:

- Install the module above ground level, as high up as possible within the structure.
- Install the module near or adjacent to an exterior-facing wall of the structure.
- Do not install the module inside a metal structure or close to large metal objects or ducts.
- Upgrade the antenna. Contact DSC technical support for antenna options.

Troubleshooting LEDs

Status LEDs indicate network and module status. The following figure shows the location of the status LEDs on the HSPA/CDMA module.

Status LEDs

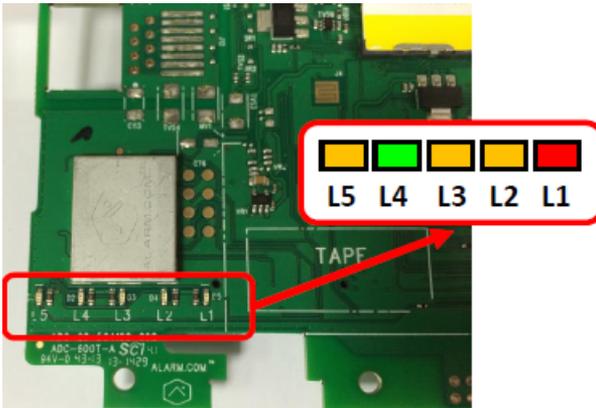

LED Functions

LED	Function
L1	Error LED. Flashes 1 to 8 times in an 8-second interval to indicate specific error. See Table 4 for errors and common fixes.
L2	Panel Communication and Z-Wave status messages. Flashes every time the module communicates with the panel and flashes in patterns to indicate Z-Wave status.
L3	HSPA/CDMA Communication. Flashes every time the HSPA/CDMA signal level is checked and when packets are exchanged with Alarm.com.
L4	HSPA/CDMA Signal Level. Flashes 0 to 5 times to indicate signal strength, or toggles on/off slowly when communicating with Alarm.com servers.
L5	Z-Wave Error LED. See Table 5 for error descriptions.

LED Details

LED L1 (red)

L1 flashes when there is an error. The number of flashes indicates the error number. If there are two or more errors at the same time, the errors will flash one after the other. The LED will stay off for at least four seconds between errors.

Number of Flashes	Error and Solution
1	Module cannot communicate with the panel. Perform a power cycle on the panel. If the error persists lift the module out of the panel and re-insert it. If the error is still observed try a different module. Finally, if that does not fix the problem try a different panel.
2	The SIM card is missing. The SIM card holder can be found on the module. Verify that the SIM card holder is closed securely and that there is a SIM card in the holder.
3	The module is trying to register on the HSPA/CDMA network. If it persists for more than a few minutes, the module is having problems registering with the HSPA/CDMA network. Check L4 for signal level. If signal level is lower than 2 "bars", change the panel's location or use a remote antenna option. If the signal is good, the module may be roaming on a HSPA/CDMA network that does not partner with our HSPA/CDMA providers, or the SIM card was not activated yet because the Alarm.com account was not created correctly.
4	The module is registered on the HSPA/CDMA network but cannot connect with Alarm.com. Contact Alarm.com Technical Support.
5	Radio portion of the module is not working correctly. If this persists for more than a few minutes the module may need to be replaced. This error is extremely rare so verify that the module is flashing 5 times.
6	This is an error only if it persists for more than a minute. Otherwise, it's just an indication that the module is fixing an unusual condition regarding communication with the HSPA/CDMA network.
7	The module is not compatible with this panel type. Please insert a compatible module.
8	If it persists, the account may have been set up incorrectly. Contact Alarm.com Technical Support. You will be asked to check the serial number of the module.

LED L2 (yellow)

L2 flashes with every communication between the module and the panel. Normal pattern calls for a series of quick flashes every two seconds in Idle mode or four seconds in PowerSave mode. It also occasionally flashes in patterns to indicate Z-Wave status. Refer to the following table for a description of the various possibilities.

LED 2	LED 5	Device Status or Error	Description
4-blink		Add Mode (lasts 120 seconds or until a device is added)	In this mode you can add a device to the local Z-Wave network. Devices cannot be added to a network if they are already a part of a network.
2-blink		Delete Mode (lasts 120 seconds or until a device is deleted)	In this mode you can delete a device from a Z-Wave network. A device can only be in one network at a time, and must receive a "delete" command before it can be learned into a new network .
Solid		Successful add node/remove node/replication (lasts 60 seconds)	After receiving this signal, leave all devices by the HSPA/CDMA module for 1 minute. Locks must be left next to the module for 4 minutes.
Solid with one blink		Add node attempt failed because node already in network (lasts 60 seconds)	Device you attempted to add to a network is already in a network, and must be "deleted" before it can join a new network.
	2-blink	No other nodes are in the network (lasts until a device is added to the network)	No devices have been added that can be controlled by the HSPA/CDMA module yet. See above for instructions on how to add devices .
	5-blink	Learn mode error (lasts 60 seconds)	Learn mode error (lasts 60 seconds).
	6-blink	No Home ID present (lasts until the module connects to Alarm.com and is configured)	When the HSPA/CDMA module first connects to Alarm.com it is configured with a necessary unique network ID.

LED L3 (yellow)

L3 flashes with every communication between the module and its radio unit in Idle mode, and with every communication with Alarm.com in Connected mode. In PowerSave mode, this LED flashes in unison with LED 2.

LED L4 (green)

L4 indicates the HSPA/CDMA signal level as a number of flashes (0 to 5 bars). The number of bars may not correspond to the bars shown on your cell phone. A level of 5 bars is obtained only in the strongest signal conditions.

Signal level is updated every ten seconds if it fluctuates, or every 30 seconds if it is fairly stable. If L4 is not flashing it indicates one of the following states:

- The module is in Powersave mode
- The module just powered up
- There is no HSPA/CDMA coverage in the area. Alarm.com recommends a steady signal level of 2 or higher for proper operation of the module

Note: In Connected Mode, the LED toggles on and off.

LED L5 (yellow)

L5 indicates Z-Wave errors. See previous tables for more information.

Various Module States (Modes)

There are three module states, or modes, as described in the following:

Mode	Description
Idle	AC power is okay and the module is not currently talking to Alarm.com
	L1 - Flashes error, if any L2 - Communication with panel L3 - Communication with radio unit L4 - Signal level (0 to 5 bars) L5 - Flashes errors, if any
PowerSave	The module just powered up, AC power is down, or AC power was recently restored and the battery is recharging. The module is fully functional and will go into Connected mode as soon as a signal needs to be sent. Press and hold the 5 Key for 2 seconds to switch the module into Idle mode and update the signal level reading. The system will go into Idle mode every 2 hours to check for any incoming messages
	L1 - Inactive L2 - Communication with panel L3 - Same flashing pattern as L2 L4 - Inactive L5 - Inactive
Connected	The module is currently talking to Alarm.com. The module stays in Connected mode for at least four minutes after reporting an event to Alarm.com, unless the 5 Key is pressed and held for 10 seconds, which will cause the module to go back to Idle mode
	L1 - Flashes errors, if any L2 - Communication with panel L3 - Communication with Alarm.com L4 - Alternates two seconds on, then two seconds off L5 - Inactive
Sleep	The panel is not connected to AC power, or there is an AC power failure, and the battery level is low. The module will connect to Alarm.com to send a signal, but will otherwise draw almost no power.

Note: If the HSPA/CDMA module is powered down for a short period of time, buffered messages from Alarm.com may be received when module power is restored.

Improving Wireless Signal Strength

Guidelines for optimal wireless signal strength:

- Install the module above ground level, as high up as possible within the structure.
- Install the module near or adjacent to an outside-facing wall of the structure.
- Do not install the module inside a metal structure or close to large metal objects or ducts.
- Upgrade the antenna. Contact Alarm.com technical support for antenna options.

As you make changes to the module location to improve signal strength, request updated signal readings to verify changes. To request an updated reading, press and hold the “5” key for 2 seconds.

Radio: 123__ 13
Connected

Walking the Customer through New User Setup on the Web

This section describes how to help your customer set up their website account, and only applies to customers on an interactive service plan with an online account. (Skip this step for customers using the module for wireless signaling only).

Before the customer can configure their website account, the Alarm.com account for that customer must be created on the Dealer Site, and the HSPA/CDMA module associated with the account must be installed successfully.

Installation

To log in and access their account, the customer can go to www.alarm.com (or custom dealer website address) to complete the new subscriber setup procedure.

The customer will need the following:

- The Web site login and temporary password included on the Alarm.com Welcome Letter, which is generated when the account was created by the dealer
- A list of their system sensors with corresponding zone IDs
- At least one phone number and e-mail address where notifications can be sent

Note: At least one sensor must be learned into the panel to complete the new subscriber setup. If not all sensors and touch screens were learned in before powering up the module, an updated sensor list must be requested by performing a HSPA/CDMA phone test or requesting an updated equipment list from the Dealer site.

Installer Programming

Interactive Menus

The “Interactive Services” menu can be used to access information about the HSPA/CDMA module, install or remove Z-Wave devices and configure or troubleshoot other interactive features. To enter the menu, press [*] [8] [Installer Code] [851].

The menu will time out after 20 minutes. Refer to the following table for the menu options.

Menu	Description
Installer Programming	Press [*][8] [Installer Code] [851] to enter Interactive Services menu
--HSPA/CDMA Module Status	Scroll down through the various HSPA/CDMA module information screens
--Radio	Signal level, connection status, roaming status, and errors (if any)
--HSPA/CDMA Freq.	HSPA/CDMA frequency used by the module
--SN	Module serial number. Needed to create or troubleshoot an Alarm.com account
--SIM Card	SIM card number. Sometimes needed to troubleshoot an account. Not applicable to CDMA radios
--Version	HSPA/CDMA module firmware version and sub-version. Example: 181a; 181 = module firmware version, a = subversion
--Advanced - Network	For Alarm.com use only
--Z-Wave Setup ²	This menu is used to add, remove, and troubleshoot Z-Wave devices and networks. To control Z-Wave devices via the Alarm.com website and smart phone apps, you will also need to enable Z-Wave services on the account
--Number of Z-Wave Devices ²	The total number of Z-Wave devices currently known to the HSPA module
--Add Z-Wave Device ²	Press [*] to enter Z-Wave Add Mode. Make sure the device being added is powered up and within 3 to 6 feet of the panel. Refer to the manufacturer's instructions for button presses required to enroll devices
--Remove Z-Wave Device ²	Press [*] to remove an existing Z-Wave device, or to “reset” a Z-Wave device that was previously learned into a different Z-Wave network. Previously enrolled devices must be reset before they can be enrolled into the module
--Z-Wave Home ID ²	Press [*] to query the Z-Wave network Home ID. If the ID is 0, verify that the module has communicated with Alarm.com and that the Alarm.com account is set up for Z-Wave.

Menu	Description
---Image Sensor Setup ¹	An image sensor daughterboard is required to enable image sensor capabilities on the module. This menu is only active if an image sensor daughterboard is connected
---Learn Image Sensor ¹	Press [*] to enter Add Mode. Enroll the image sensor by inserting batteries or resetting
---Delete Image Sensor ¹	Press [*] and scroll to the image sensor to delete. Press [*] to delete
---Image Sensor Settings ¹	Press [*] and scroll to the image sensor of interest. Press [*]
----Image Sensor #[x] ¹	[x] is the sensor ID. Press [*] to view information on this image sensor
----[Power Information] ¹	Gives information on the image sensor's battery level and power status
----Signal ¹	Signal strength of the communication between image sensor and image sensor daughterboard
----Test PIR ¹	Press [*] to put the image sensor in PIR Test Mode
----PIR Sensitivity ¹	Press [*] to view current selection. Scroll down to view sensitivity levels. Press [*] to select
----Rules ¹	Displays whether rules are confirmed
----MAC ¹	MAC address of image sensor
----Version ¹	Image sensor daughterboard version
----Last Talk ¹	Last image sensor talk time
---Extended Range Option	Press [*] to enable/disable extended range
---Communications Test	Press [*] to perform ADC communication test
User Functions	Press [*][6] [Master Code] to enter User Functions menu. Then scroll to Interactive Services
--HSPA/CDMA Module Status	See Installer Programming section
--Radio	See Installer Programming section
--HSPA/CDMA Freq.	See Installer Programming section
--SN	See Installer Programming section
--SIM card	See Installer Programming section
--Version	See Installer Programming section
--Advanced - Network	See Installer Programming section
--Z-Wave Setup ²	See Installer Programming section
--Number of Z-Wave Devices ²	See Installer Programming section
--Add Z-Wave Device ²	See Installer Programming section
--Remove Z-Wave Device ²	See Installer Programming section
--Z-Wave Home ID ²	See Installer Programming section
--Image Sensor Setup ¹	See Installer Programming section
--Image Sensor #[x] ¹	See Installer Programming section
----[Power Information] ¹	See Installer Programming section
----Signal ¹	See Installer Programming section
----Test PIR ¹	See Installer Programming section
--Communication Test	See Installer Programming section

Installation

¹All Image Sensor menus are only available when an image sensor daughterboard has been connected to the module. An image sensor daughterboard is required to enable image sensor functionality. An interactive Alarm.com account with an image sensor service plan is required for image capabilities and features. ² Refer to the Home Automation installation instructions and guides on the Alarm.com Dealer Site for more information on Z-Wave enrollment and troubleshooting.

Limited Warranty

Digital Security Controls warrants the original purchaser that for a period of twelve months from the date of purchase, the product shall be free of defects in materials and workmanship under normal use. During the warranty period, Digital Security Controls shall, at its option, repair or replace any defective product upon return of the product to its factory, at no charge for labour and materials. Any replacement and/or repaired parts are warranted for the remainder of the original warranty or ninety (90) days, whichever is longer. The original purchaser must promptly notify Digital Security Controls in writing that there is defect in material or workmanship, such written notice to be received in all events prior to expiration of the warranty period. There is absolutely no warranty on software and all software products are sold as a user license under the terms of the software license agreement included with the product. The Customer assumes all responsibility for the proper selection, installation, operation and maintenance of any products purchased from DSC. Custom products are only warranted to the extent that they do not function upon delivery. In such cases, DSC can replace or credit at its option.

International Warranty

The warranty for international customers is the same as for any customer within Canada and the United States, with the exception that Digital Security Controls shall not be responsible for any customs fees, taxes, or VAT that may be due.

Warranty Procedure

To obtain service under this warranty, please return the item(s) in question to the point of purchase. All authorized distributors and dealers have a warranty program. Anyone returning goods to Digital Security Controls must first obtain an authorization number. Digital Security Controls will not accept any shipment whatsoever for which prior authorization has not been obtained.

Conditions to Void Warranty

This warranty applies only to defects in parts and workmanship relating to normal use. It does not cover:

- damage incurred in shipping or handling;
- damage caused by disaster such as fire, flood, wind, earthquake or lightning;
- damage due to causes beyond the control of Digital Security Controls such as excessive voltage, mechanical shock or water damage;
- damage caused by unauthorized attachment, alterations, modifications or foreign objects;
- damage caused by peripherals (unless such peripherals were supplied by Digital Security Controls);
- defects caused by failure to provide a suitable installation environment for the products;
- damage caused by use of the products for purposes other than those for which it was designed;
- damage from improper maintenance;
- damage arising out of any other abuse, mishandling or improper application of the products.

Items Not Covered by Warranty

In addition to the items which void the Warranty, the following items shall not be covered by Warranty: (i) freight cost to the repair centre; (ii) products which are not identified with DSC's product label and lot number or serial number; (iii) products disassembled or repaired in

such a manner as to adversely affect performance or prevent adequate inspection or testing to verify any warranty claim. Access cards or tags returned for replacement under warranty will be credited or replaced at DSC's option. Products not covered by this warranty, or otherwise out of warranty due to age, misuse, or damage shall be evaluated, and a repair estimate shall be provided. No repair work will be performed until a valid purchase order is received from the Customer and a Return Merchandise Authorisation number (RMA) is issued by DSC's Customer Service.

Digital Security Controls's liability for failure to repair the product under this warranty after a reasonable number of attempts will be limited to a replacement of the product, as the exclusive remedy for breach of warranty. Under no circumstances shall Digital Security Controls be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict liability, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of the product or any associated equipment, cost of capital, cost of substitute or replacement equipment, facilities or services, down time, purchaser's time, the claims of third parties, including customers, and injury to property. The laws of some jurisdictions limit or do not allow the disclaimer of consequential damages. If the laws of such a jurisdiction apply to any claim by or against DSC, the limitations and disclaimers contained here shall be to the greatest extent permitted by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, so that the above may not apply to you.

Disclaimer of Warranties

This warranty contains the entire warranty and shall be in lieu of any and all other warranties, whether expressed or implied (including all implied warranties of merchantability or fitness for a particular purpose) And of all other obligations or liabilities on the part of Digital Security Controls Digital Security Controls neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product.

This disclaimer of warranties and limited warranty are governed by the laws of the province of Ontario, Canada.

Digital Security Controls recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this product to fail to perform as expected.

Installer's Lockout

Any products returned to DSC which have the Installer's Lockout option enabled and exhibit no other problems will be subject to a service charge.

Out of Warranty Repairs

Digital Security Controls will at its option repair or replace out-of-warranty products which are returned to its factory according to the following conditions. Anyone returning goods to Digital Security Controls must first obtain an authorization number. Digital Security Controls will not accept any shipment whatsoever for which prior authorization has not been obtained.

Installation

Products which Digital Security Controls determines to be repairable will be repaired and returned. A set fee which Digital Security Controls has predetermined and which may be revised from time to time, will be charged for each unit repaired.

Products which Digital Security Controls determines not to be repairable will be replaced by the nearest equivalent product available at that time. The current market price of the replacement product will be charged for each replacement unit.

End User License Agreement

IMPORTANT - READ CAREFULLY: DSC Software purchased with or without Products and Components is copyrighted and is purchased under the following license terms:

This End-User License Agreement ("EULA") is a legal agreement between You (the company, individual or entity who acquired the Software and any related Hardware) and Digital Security Controls, a division of Tyco Safety Products Canada Ltd. ("DSC"), the manufacturer of the integrated security systems and the developer of the software and any related products or components ("HARDWARE") which You acquired.

If the DSC software product ("SOFTWARE PRODUCT" or "SOFTWARE") is intended to be accompanied by HARDWARE, and is NOT accompanied by new HARDWARE, You may not use, copy or install the SOFTWARE PRODUCT. The SOFTWARE PRODUCT includes computer software, and may include associated media, printed materials, and "online" or electronic documentation.

Any software provided along with the SOFTWARE PRODUCT that is associated with a separate end-user license agreement is licensed to You under the terms of that license agreement.

By installing, copying, downloading, storing, accessing or otherwise using the SOFTWARE PRODUCT, You agree unconditionally to be bound by the terms of this EULA, even if this EULA is deemed to be a modification of any previous arrangement or contract. If You do not agree to the terms of this EULA, DSC is unwilling to license the SOFTWARE PRODUCT to You, and You have no right to use it.

SOFTWARE PRODUCT LICENSE

The SOFTWARE PRODUCT is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE PRODUCT is licensed, not sold.

GRANT OF LICENSE This EULA grants You the following rights:

Software Installation and Use - For each license You acquire, You may have only one copy of the SOFTWARE PRODUCT installed.

Storage/Network Use - The SOFTWARE PRODUCT may not be installed, accessed, displayed, run, shared or used concurrently on or from different computers, including a workstation, terminal or other digital electronic device ("Device"). In other words, if You have several workstations, You will have to acquire a license for each workstation where the SOFTWARE will be used.

Backup Copy - You may make back-up copies of the SOFTWARE PRODUCT, but You may only have one copy per license installed at any given time. You may use the back-up copy solely for archival purposes. Except as expressly provided in this EULA, You may not otherwise make copies of the SOFTWARE PRODUCT, including the printed materials accompanying the SOFTWARE.

DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS

Limitations on Reverse Engineering, Decompilation and Disassembly - You may not reverse engineer, decompile, or disassemble the SOFTWARE PRODUCT, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation. You may not make any changes or modifications to the Software, without the written permission of an officer of DSC. You may not remove any proprietary notices, marks or labels from the Software Product. You shall institute reasonable measures to ensure compliance with the terms and conditions of this EULA.

Separation of Components - The SOFTWARE PRODUCT is licensed as a single product. Its component parts may not be separated for use on more than one HARDWARE unit.

Single INTEGRATED PRODUCT - If You acquired this SOFTWARE with HARDWARE, then the SOFTWARE PRODUCT is licensed with the HARDWARE as a single integrated product. In this case, the SOFTWARE PRODUCT may only be used with the HARDWARE as set forth in this EULA.

Rental - You may not rent, lease or lend the SOFTWARE PRODUCT. You may not make it available to others or post it on a server or web site.

Software Product Transfer - You may transfer all of Your rights under this EULA only as part of a permanent sale or transfer of the HARDWARE, provided You retain no copies. You transfer all of the SOFTWARE PRODUCT (including all component parts, the media and printed materials, any upgrades and this EULA), and provided the recipient agrees to the terms of this EULA. If the SOFTWARE PRODUCT is an upgrade, any transfer must also include all prior versions of the SOFTWARE PRODUCT.

Termination - Without prejudice to any other rights, DSC may terminate this EULA if You fail to comply with the terms and conditions of this EULA. In such event, You must destroy all copies of the SOFTWARE PRODUCT and all of its component parts.

Trademarks - This EULA does not grant You any rights in connection with any trademarks or service marks of DSC or its suppliers.

COPYRIGHT - All title and intellectual property rights in and to the SOFTWARE PRODUCT (including but not limited to any images, photographs, and text incorporated into the SOFTWARE PRODUCT), the accompanying printed materials, and any copies of the SOFTWARE PRODUCT, are owned by DSC or its suppliers. You may not copy the printed materials accompanying the SOFTWARE PRODUCT. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE PRODUCT are the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants You no rights to use such content. All rights not expressly granted under this EULA are reserved by DSC and its suppliers.

EXPORT RESTRICTIONS - You agree that You will not export or re-export the SOFTWARE PRODUCT to any country, person, or entity subject to Canadian export restrictions.

CHOICE OF LAW - This Software License Agreement is governed by the laws of the Province of Ontario, Canada.

Installation

ARBITRATION - All disputes arising in connection with this Agreement shall be determined by final and binding arbitration in accordance with the Arbitration Act, and the parties agree to be bound by the arbitrator's decision. The place of arbitration shall be Toronto, Canada, and the language of the arbitration shall be English.

LIMITED WARRANTY

NO WARRANTY - DSC PROVIDES THE SOFTWARE "AS IS" WITHOUT WARRANTY. DSC DOES NOT WARRANT THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE.

CHANGES IN OPERATING ENVIRONMENT - DSC shall not be responsible for problems caused by changes in the operating characteristics of the HARDWARE, or for problems in the interaction of the SOFTWARE PRODUCT with non-DSC-SOFTWARE or HARDWARE PRODUCTS.

LIMITATION OF LIABILITY; WARRANTY REFLECTS ALLOCATION OF RISK - IN ANY EVENT, IF ANY STATUTE IMPLIES WARRANTIES OR CONDITIONS NOT STATED IN THIS LICENSE AGREEMENT, DSC'S ENTIRE LIABILITY UNDER ANY PROVISION OF THIS LICENSE AGREEMENT SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU TO LICENSE THE SOFTWARE PRODUCT AND FIVE CANADIAN DOLLARS (CAD\$5.00). BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

DISCLAIMER OF WARRANTIES - THIS WARRANTY CONTAINS THE ENTIRE WARRANTY AND SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF DSC. DSC MAKES NO OTHER WARRANTIES. DSC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON PURPORTING TO ACT ON ITS BEHALF TO MODIFY OR TO CHANGE THIS WARRANTY, NOR TO ASSUME FOR IT ANY OTHER WARRANTY OR LIABILITY CONCERNING THIS SOFTWARE PRODUCT.

EXCLUSIVE REMEDY AND LIMITATION OF WARRANTY - UNDER NO CIRCUMSTANCES SHALL DSC BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, LOSS OF PROFITS, LOSS OF THE SOFTWARE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF SUBSTITUTE OR REPLACEMENT EQUIPMENT, FACILITIES OR SERVICES, DOWNTIME, PURCHASERS TIME, THE CLAIMS OF THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY.

DSC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this SOFTWARE PRODUCT to fail to perform as expected.

Regulatory Information

For UL/ULC applications, the temperature rating is 0-49°C and the maximum relative humidity rating is 85% RH.

FCC Statement

Changes or modifications not expressly approved by DSC can void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment in to an outlet on a circuit different from that which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC and Industry standards RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Industry Canada Statement

CAN ICES-3(B)/NMB-3(B)


Under Industry Canada regulations, this radio transmitter only operates using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to others, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC/IC Label

This modular transmitter is labeled with its own FCC ID and IC number. When the module is installed inside the host device and the FCC ID/IC of the module is not visible, the host device shall display the provided label referring to the FCC ID and IC of the enclosed module. This label is shipped together with the module and it is the responsibility of the integrator to apply it to the exterior of the enclosure as displayed in the following figure.

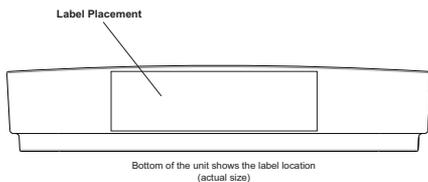

For additional information about the modules discussed in this chapter, refer to the Alarm.com web site.

EN50131 Compliant Installations

1. The 3G8080(I), CD8080(I) module is monitored by the control panel and it is programmed via the programming menu (* 8, section [851] in the control panel. The interface is connected to the PC-Link bus as shown in the diagram included in this manual.
2. The Ethernet port is protected against surge transients up to 2.5kV and both Ethernet port and GPRS/3G Cellular path are immune to conducted and radiated RF fields with levels up to 10V/m as tested per EN50130-4 Standard.
3. The 3G8080(I), CD8080(I) module conforms with radiated emissions levels for Class B equipment as per standards EN61000- 6-3/EN55022/CISPR22.
4. The 3G8080(I), CD8080(I) module uses AES128 encryption and heartbeat supervision for both Ethernet and GPRS/3G Cellular communication paths and it meets security levels S2 as per EN50136-2-1 (EN50131-1). It also uses authentication for each message exchanged with the compatible receiver equipment at ARC and it meets level I2 for information security.
5. The TL2803G(R)-EU module has two communication paths: Ethernet 10/100BaseT and GPRS/3G Cellular communication path that can be used in a redundant (parallel) mode or back-up mode configuration based on selecting the appropriate option in the programming section [851][005]. The 3G2080(R)-EU module has only one communication path:GPRS/3G Cellular communication path using 900/1800/2100MHz Public Cellular Network.

TL2803GR-EU, TL2803G-EU, 3G2080R-EU, 3G2080-EU have been certified by Telefication in accordance with EN50131-1 requirements for Grade 2, Class II and ATS Class 3,4,5.

© 2015 Tyco Security Products. All Rights Reserved.
Tech Support: 1-800-387-3630 (Canada & U.S.) or 905-760-3000
www.dsc.com

The trademarks, logos, and service marks displayed on this document are registered in the United States [or other countries]. Any misuse of the trademarks is strictly prohibited and Tyco will aggressively enforce its intellectual property rights to the fullest extent of the law, including pursuit of criminal prosecution wherever necessary. All trademarks not owned by Tyco are the property of their respective owners, and are used with permission or allowed under applicable laws.

Product offerings and specifications are subject to change without notice. Actual products may vary from photos. Not all products include all features. Availability varies by region; contact your sales representative.

DSC

From Tyco Security Products



29 00909 2R001